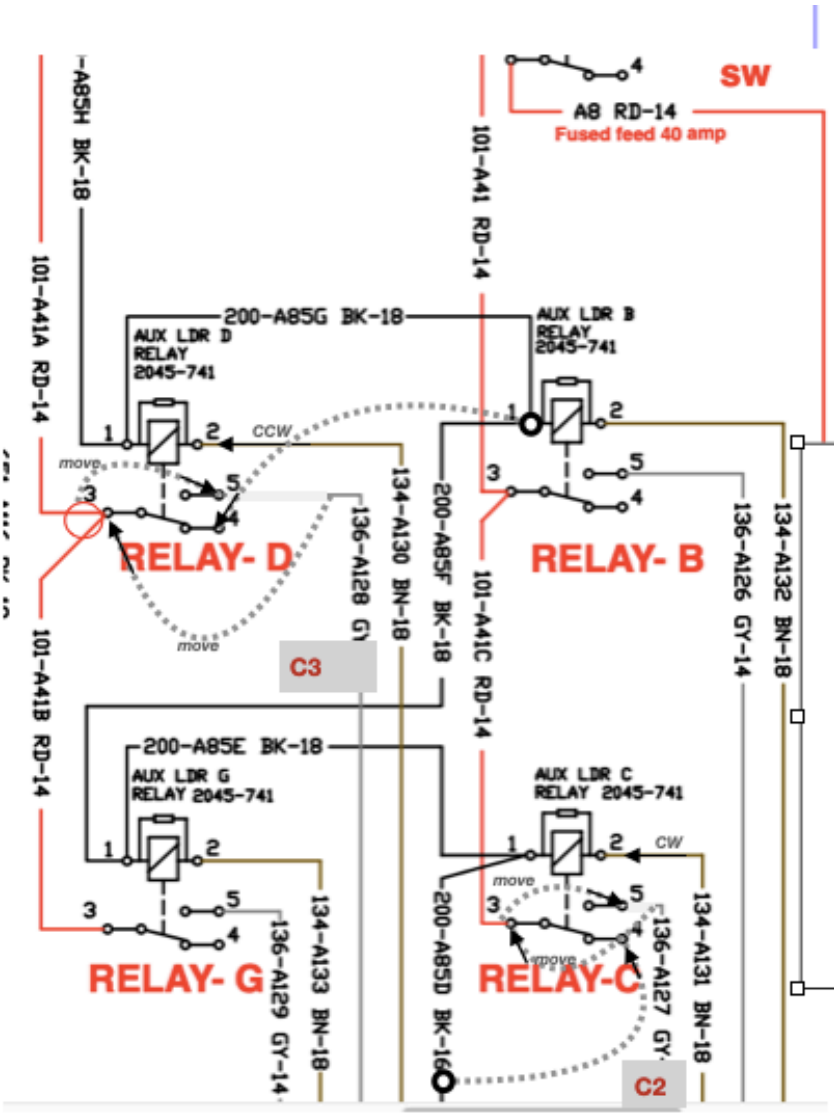

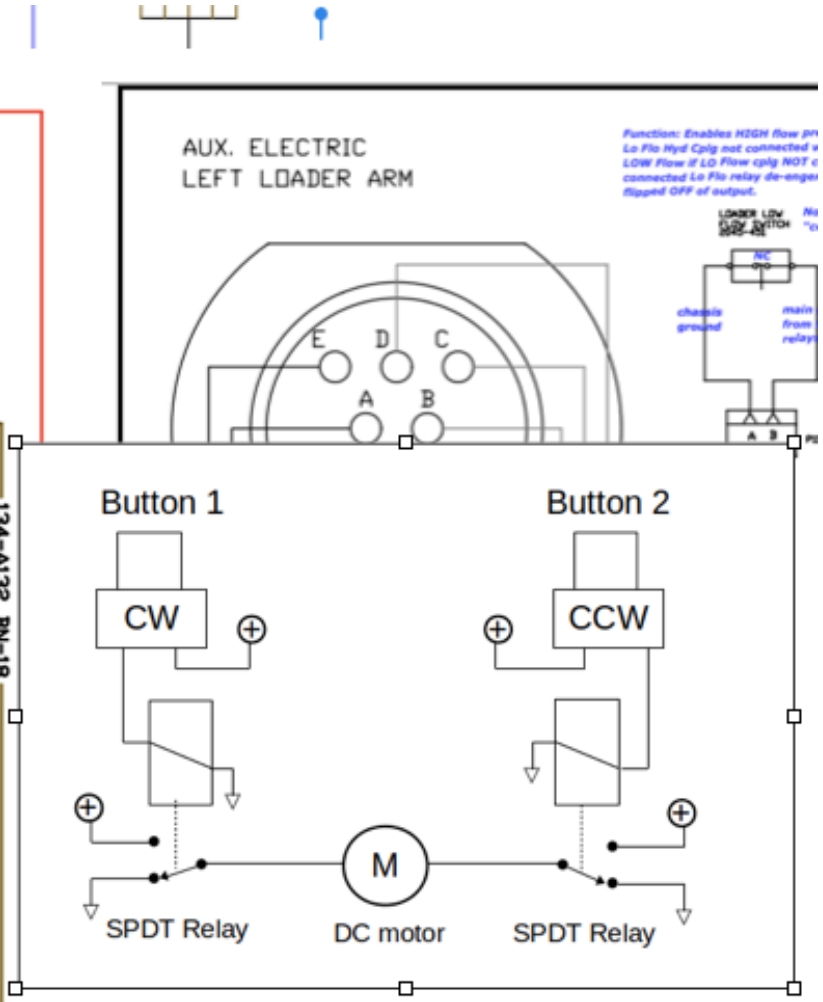

C3 & C2 run directly to motor, #200 is ground:

— Connect a ground wire(200) to each #4 terminal,
— move the fused hot wire from #3 to #5 terminal,
— Remount the C3 & C2 wires from present #5 term. to their respective common switched #3 terminals, DONE.